



# For your safety + security

## VERHALTEN IM BRANDFALL EN CAS D'INCENDIE IN CASE OF FIRE

*Ruhe bewahren*  
*Garder son calme*    *Keep calm*

- 1**  Alarmieren  
Alerter  
Raise the alarm








 Messezentrale  
Centrale d'alarme    **+ 41 58 206 23 23**  
Alarm control centre


- 2**  Retten  
Sauver  
Rescue

- 3**  Löschen  
Éteindre  
Extinguish

Stand: 14.05.2014

### Legende | Légende | Legend

- |   |  |
|---|--|
|  Ihr Standort<br>Vous êtes ici<br>You are here  |  Brandalarm-Taster<br>Bouton poussoir<br>Fire alarm button  |
|  Notausgang<br>Sortie de secours<br>Emergency exit  |  Wasserlöschposten<br>Poste incendie<br>Fire hose           |
|  Fluchtweg<br>Issue de secours<br>Escape route  |  Handfeuerlöscher<br>Extincteur à main<br>Fire extinguisher |
|  Lift bei Brand blockiert<br>Ascenseur bloqué en cas d'incendie<br>Elevator blocked in case of fire |  |

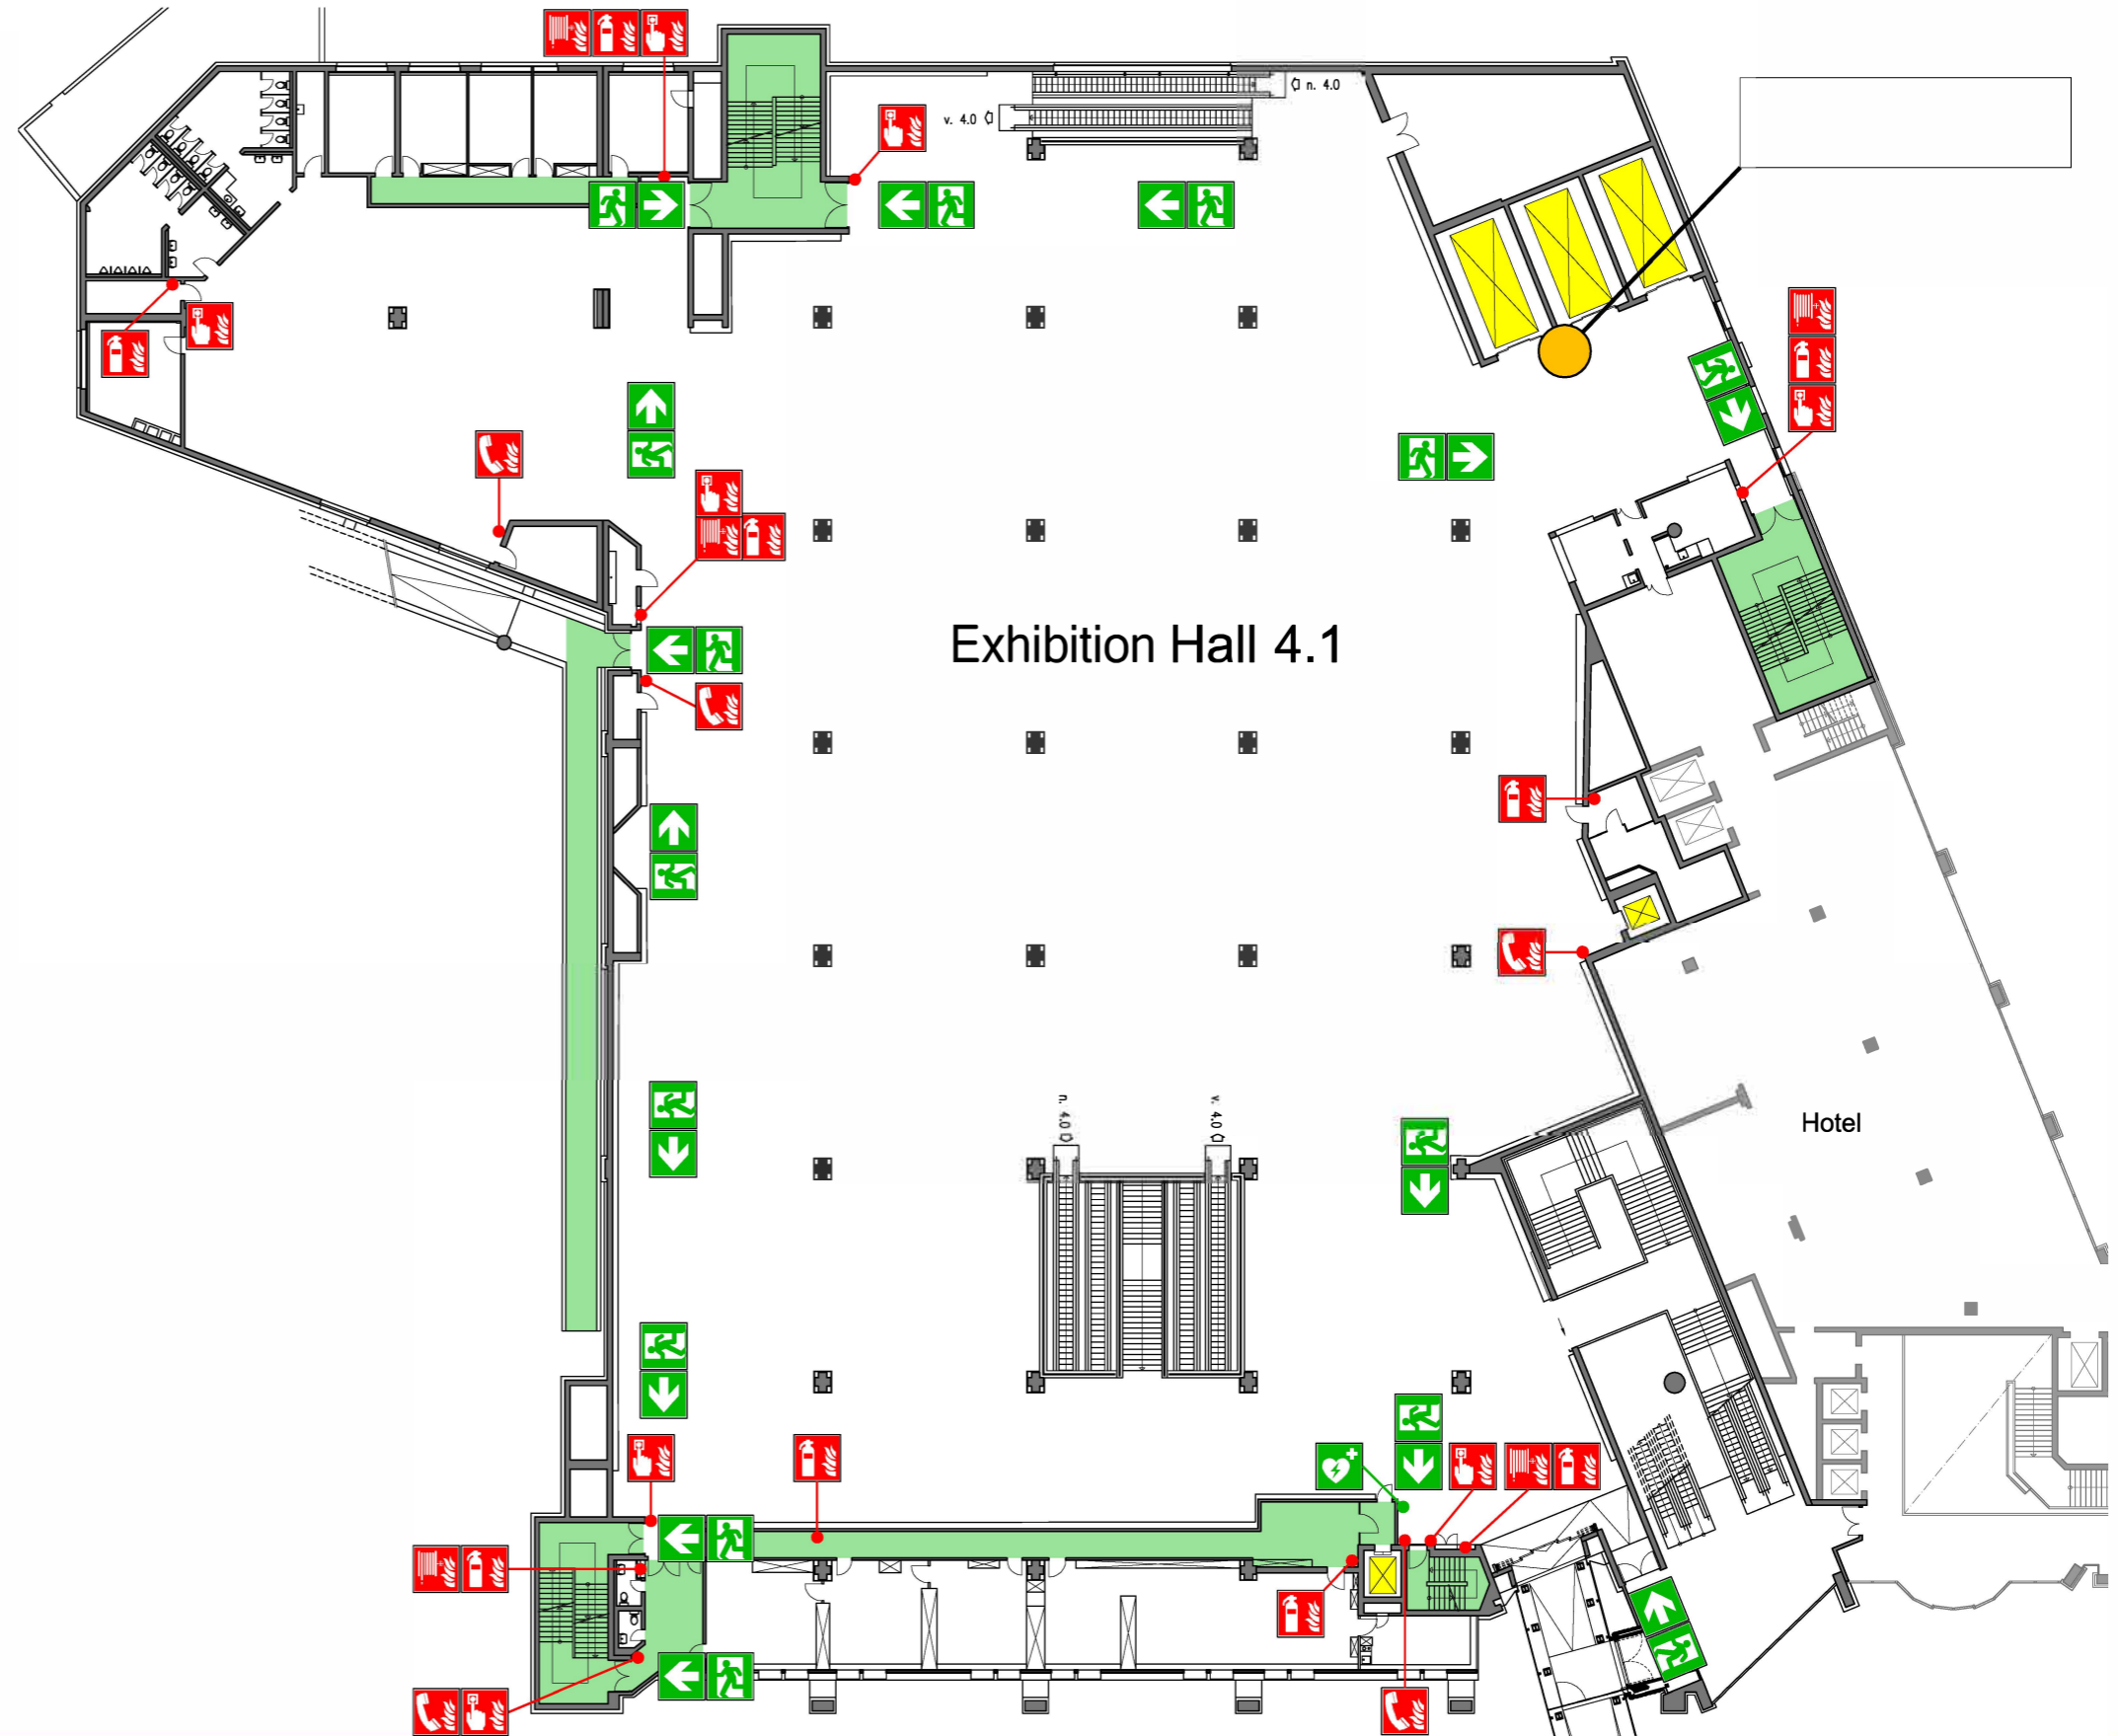


# For your safety + security

## VERHALTEN IM BRANDFALL EN CAS D'INCENDIE IN CASE OF FIRE

*Ruhe bewahren  
Garder son calme    Keep calm*

- 1**  Alarmieren  
Alerter  
Raise the alarm








 Messezentrale  
Centrale d'alarme **+ 41 58 206 23 23**  
Alarm control centre

- 2**  Retten  
Sauver  
Rescue

- 3**  Löschen  
Éteindre  
Extinguish

Stand: 14.05.2014

### Legende | Légende | Legend

- |   |  |
|---|--|
|  Ihr Standort<br>Vous êtes ici<br>You are here  |  Brandalarm-Taster<br>Bouton poussoir<br>Fire alarm button  |
|  Notausgang<br>Sortie de secours<br>Emergency exit  |  Wasserlöschposten<br>Poste incendie<br>Fire hose           |
|  Fluchtweg<br>Issue de secours<br>Escape route  |  Handfeuerlöscher<br>Extincteur à main<br>Fire extinguisher |
|  Lift bei Brand blockiert<br>Ascenseur bloqué en cas d'incendie<br>Elevator blocked in case of fire |  |




# For your safety + security

## VERHALTEN IM BRANDFALL EN CAS D'INCENDIE IN CASE OF FIRE

*Ruhe bewahren  
Garder son calme    Keep calm*

**1**  Alarmieren  
Alerter  
Raise the alarm








 Messezentrale  
Centrale d'alarme    **+ 41 58 206 23 23**  
Alarm control centre


**2**  Retten  
Sauver  
Rescue

**3**  Löschen  
Éteindre  
Extinguish

Stand: 14.05.2014

### Legende | Légende | Legend


	Ihr Standort Vous êtes ici You are here		Brandalarm-Taster Bouton poussoir Fire alarm button
	Notausgang Sortie de secours Emergency exit		Wasserlöschposten Poste incendie Fire hose
	Fluchtweg Issue de secours Escape route		Handfeuerlöscher Extincteur à main Fire extinguisher
	Lift bei Brand blockiert Ascenseur bloqué en cas d'incendie Elevator blocked in case of fire		

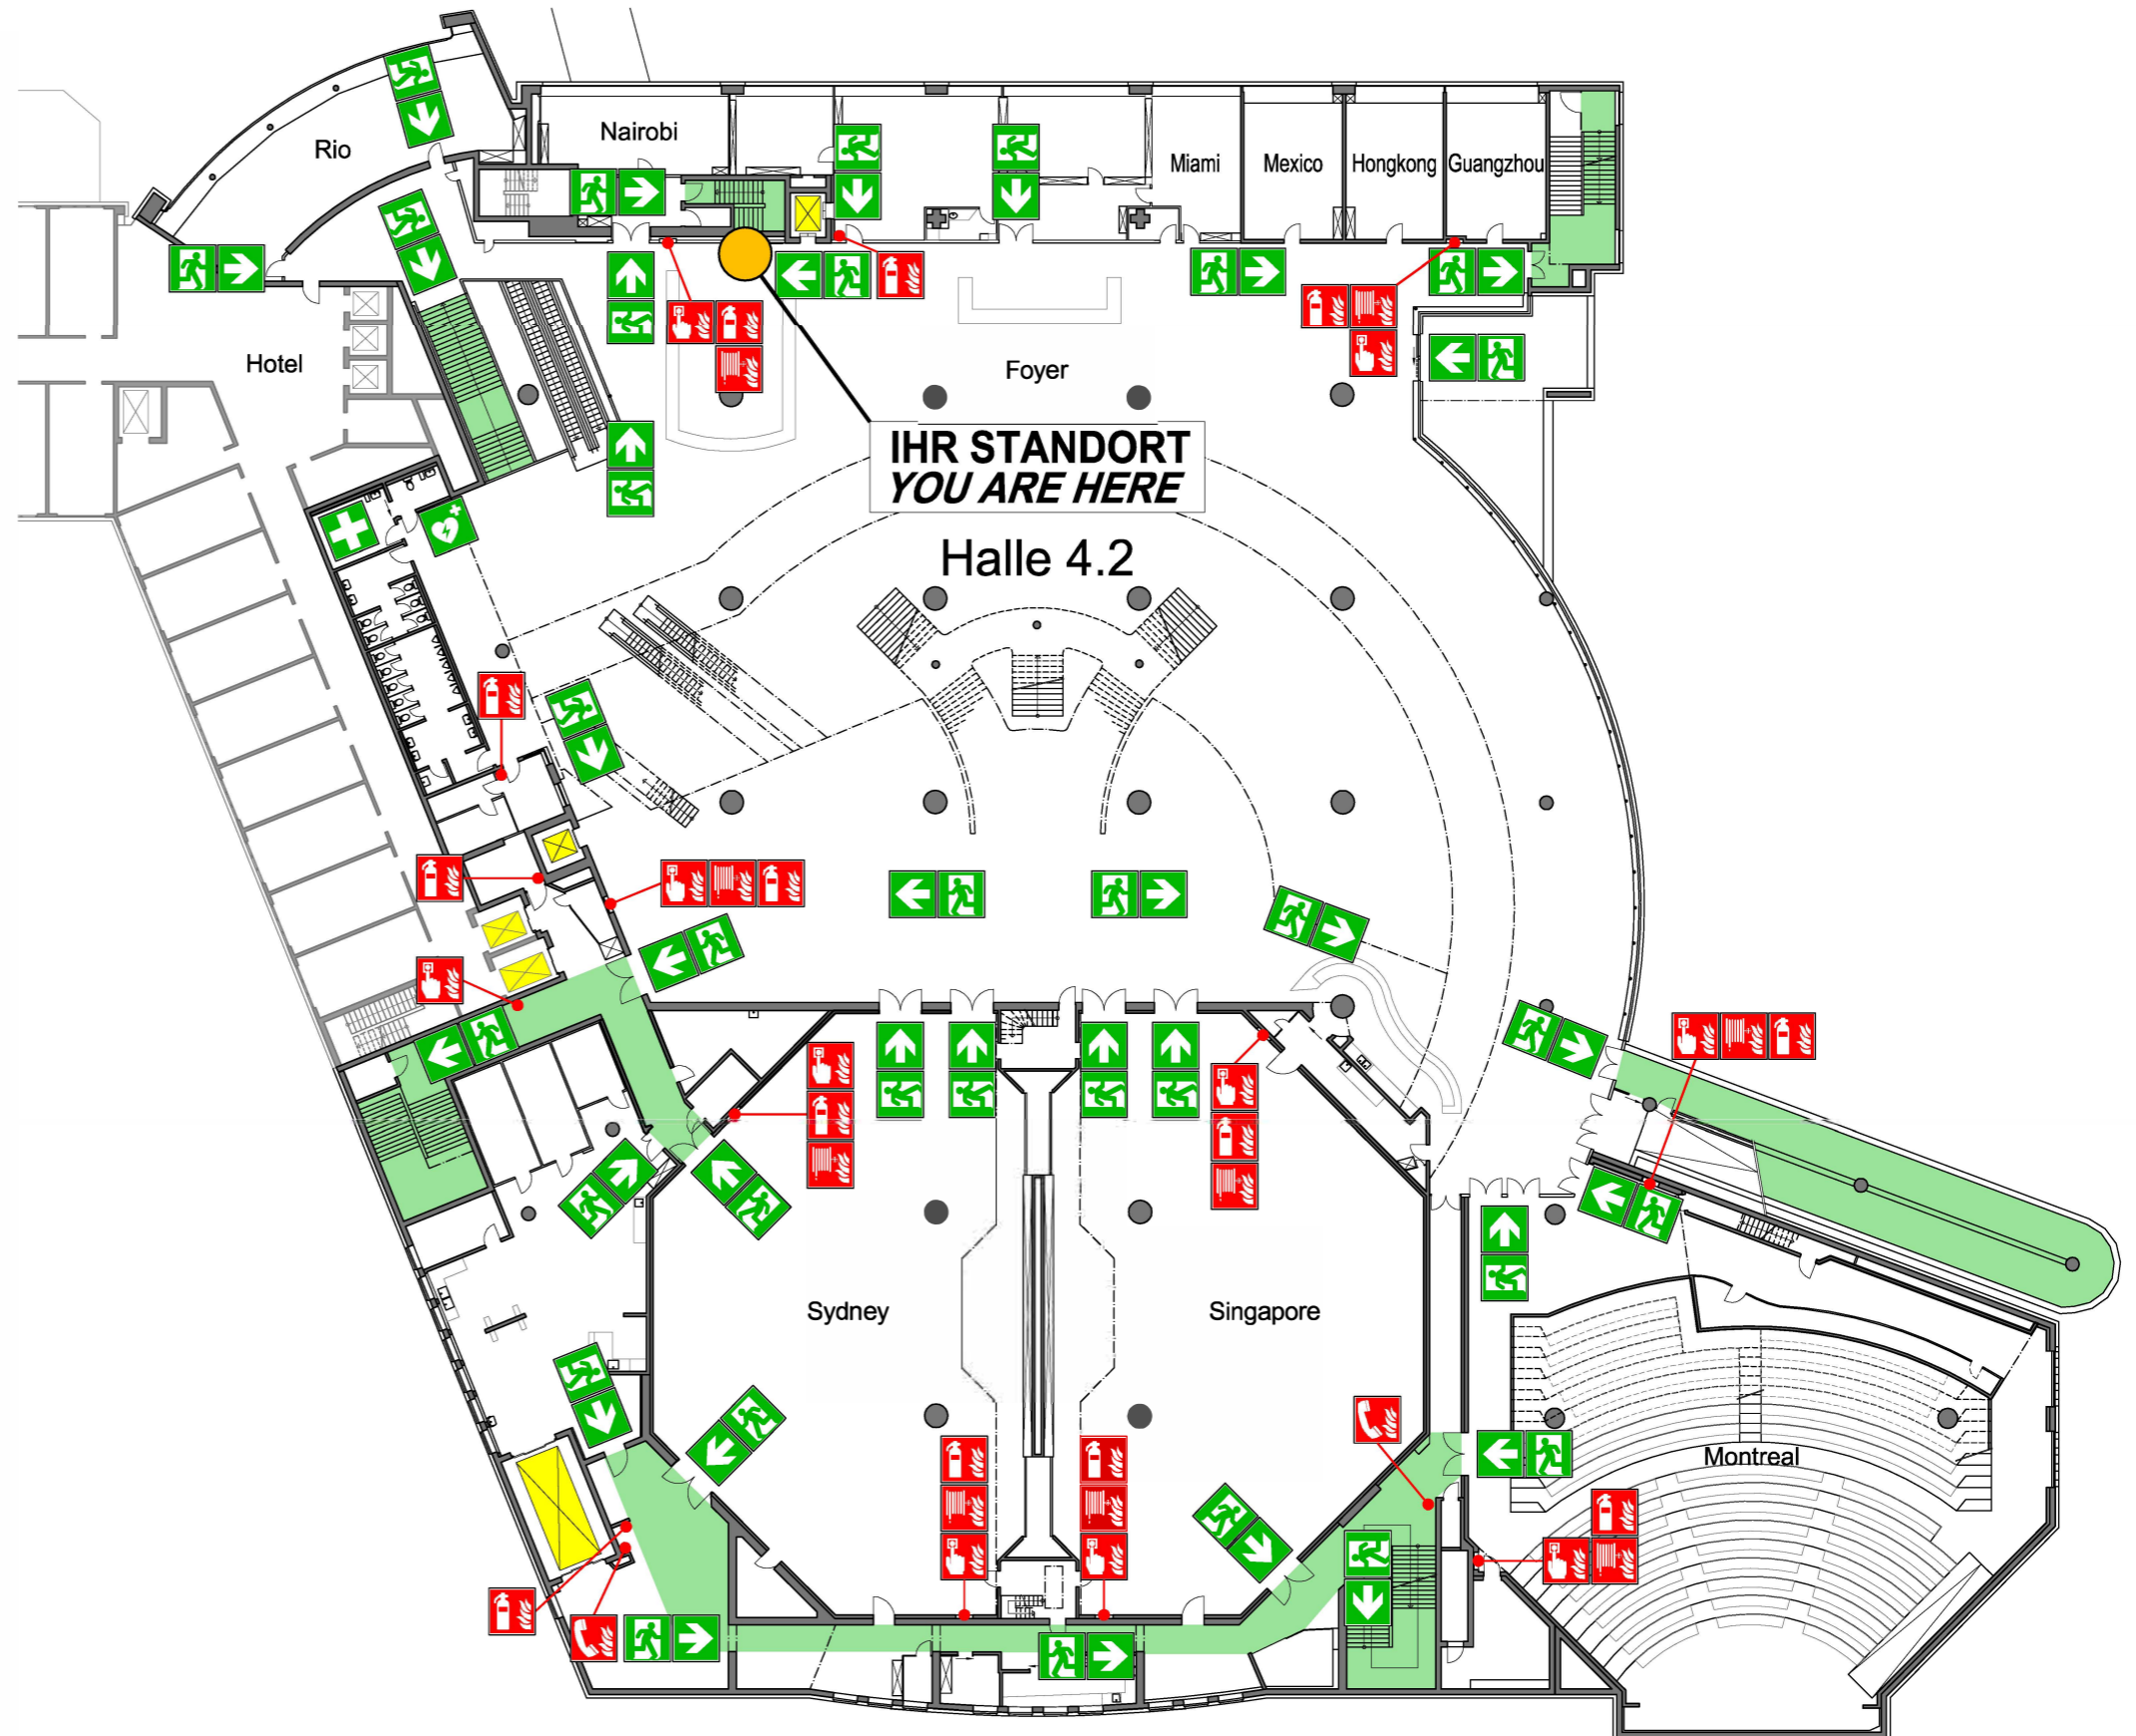


# For your safety + security

## VERHALTEN IM BRANDFALL EN CAS D'INCENDIE IN CASE OF FIRE

*Ruhe bewahren*  
*Garder son calme*    *Keep calm*

- 1**  Alarmieren  
Alerter  
Raise the alarm





 

 
 Messezentrale  
Centrale d'alarme    **+ 41 58 206 23 23**  
Alarm control centre

- 2**  Retten  
Sauver  
Rescue

- 3**  Löschen  
Éteindre  
Extinguish

Stand: 14.05.2014

### Legende | Légende | Legend

- |   |  |
|---|--|
|  Ihr Standort<br>Vous êtes ici<br>You are here  |  Brandalarm-Taster<br>Bouton poussoir<br>Fire alarm button  |
|  Notausgang<br>Sortie de secours<br>Emergency exit  |  Wasserlöschposten<br>Poste incendie<br>Fire hose           |
|  Fluchtweg<br>Issue de secours<br>Escape route  |  Handfeuerlöscher<br>Extincteur à main<br>Fire extinguisher |
|  Lift bei Brand blockiert<br>Ascenseur bloqué en cas d'incendie<br>Elevator blocked in case of fire |  |

